

Quick Start Guide

Smart Presence Sensor

7100001647 REV.1.1.0
Images may differ from actual products.


1 Before You Start

A Tapo Hub is required. Make sure your Tapo Hub's firmware is updated to the latest version and successfully set up via the Tapo app.



1 Power Up Your Sensor

Remove the back cover and insert the batteries. The front LED should blink.

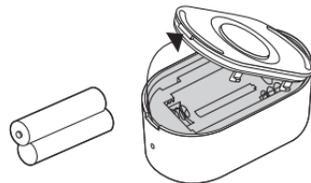

2 Set Up Your Sensor

Open the Tapo app and tap the ⊕ button. Select **Sensors**, then choose your model. Follow the app instructions to complete setup.



3 Test Your Sensor


Take your sensor to the preferred location and wave your hand in front of the sensor to test it. The Tapo app should show if the sensor is triggered.



4 Install Your Sensor


Option 1: Attach to metallic surfaces

Magnetically attach to metallic objects.

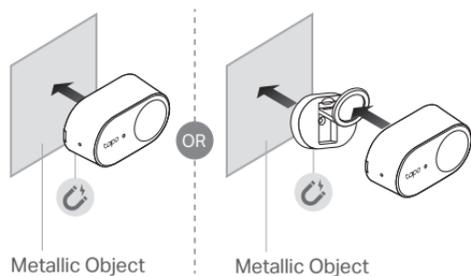

Option 2: Set on a table or shelf


Place the sensor on your desired table or shelf.

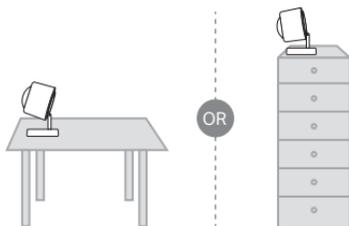

Option 3: Stick to a clean wall

1) Stick the base with the adhesive to the clean wall, and press it down for 15s to ensure the base is firmly attached.

2) Attach the sensor to the base.

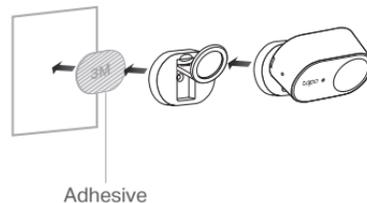


Option 4: Wall/Overhang mounting


1) Drill a 6mm diameter screw hole.



2) Insert the anchor into the hole, then use the mounting screw to affix the base over the anchor.

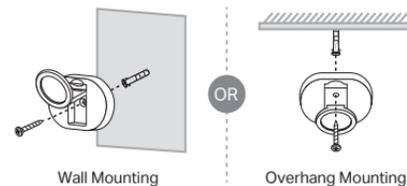


3) Attach the sensor to the base.

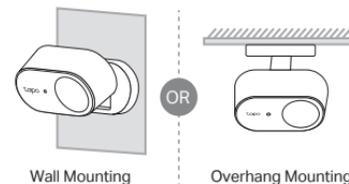


Detection Area

The sensor detects human presence and motion, making it easier to automate your space.

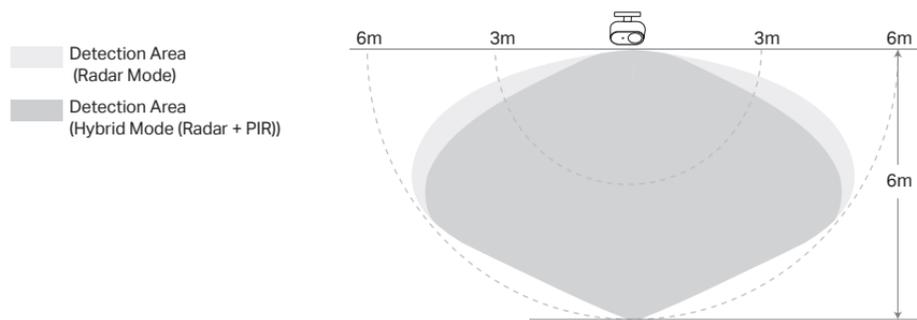

Appearance

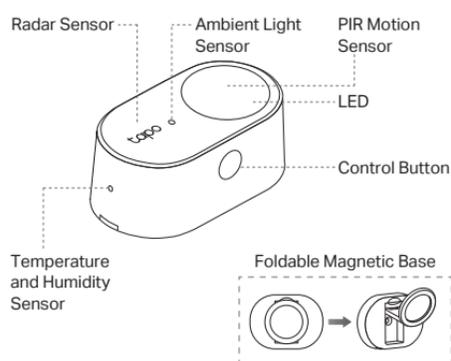

Control Button Explanation

- Double press**
Test connection with the hub by checking if the hub sounds an alarm.
- Press and hold for 5 seconds**
Reset and enter pairing mode.



Need some help?

Visit <https://www.tapo.com/support/> for technical support, the user guide, FAQs, warranty & more




LED Explanation

Blinking	Resetting and entering pairing mode; Updating firmware
Blinks once*	Human presence/motion detected

*You can enable this LED status in the Tapo app.


How to reset and enter pairing mode

Press and hold the Control button for 5 seconds until the front LED starts blinking.

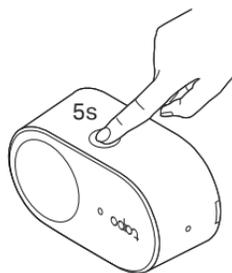

How to replace the battery

- 1) Remove the back cover.
- 2) Replace with the new batteries (AAA/LR03).

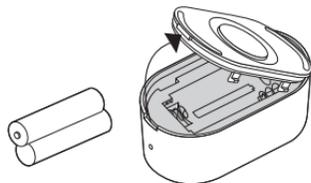

Warning

Risk of explosion if the battery is replaced by an incorrect type.

Warning

Avoid replacement of a battery with an incorrect type that can defeat a safeguard.
Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Operating Temperature: 0°C (32°F) - 50°C (122°F)

The installation height should not be higher than 2 meters.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- If you need service, please contact us.
- Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple's performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

TP-Link hereby declares that the smart presence sensor is in compliance with the essential requirements and other

relevant provisions of directives 2014/53/EU, 2011/65/EU and (EU) 2015/863.

The original EU declaration of conformity may be found at <https://www.tapo.com/support/ce/>
TP-Link hereby declares that the smart presence sensor is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK declaration of conformity may be found at <https://www.tapo.com/support/ukca/>

For EU/UK Region:
Operating Frequency / Nominal Operating Frequency / Max Output Power:
863~865MHz / 863.35MHz / 25mW (e.r.p)
863~865MHz / 864.35MHz / 25mW (e.r.p)
868~868.6MHz / 868.35MHz / 25mW (e.r.p)



©2025 TP-Link