




1 Cutout Size

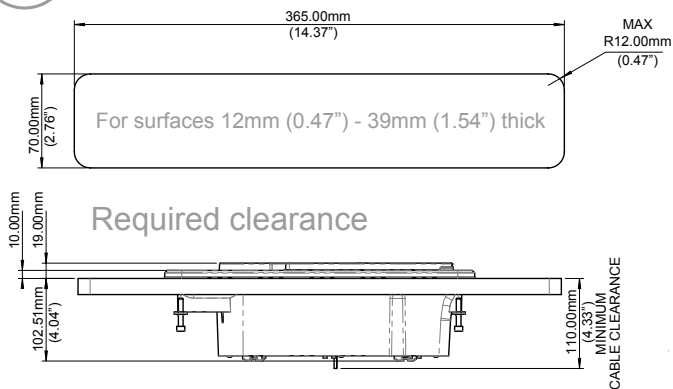


2 Fit QIKDOC into surface

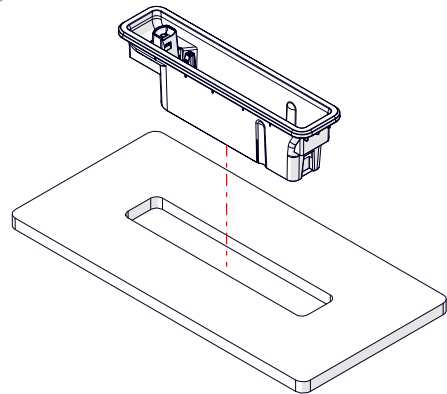

3 Align clamp brackets with QIKDOC and screw into place using screws provided (a T10 Torx bit is required)

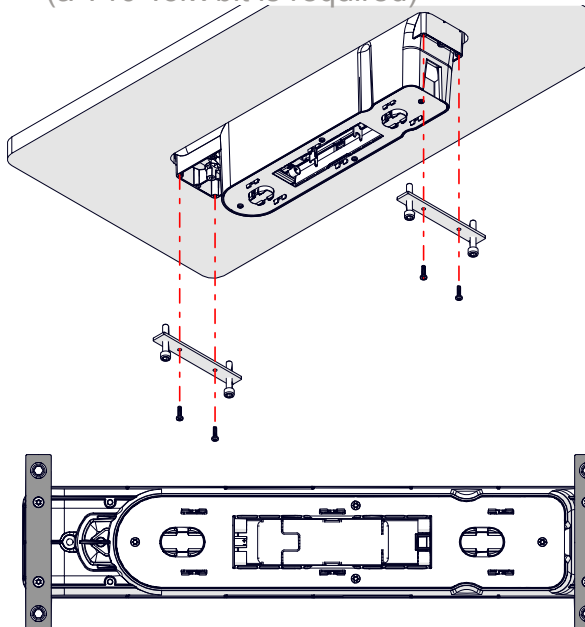


4 Tighten bolts

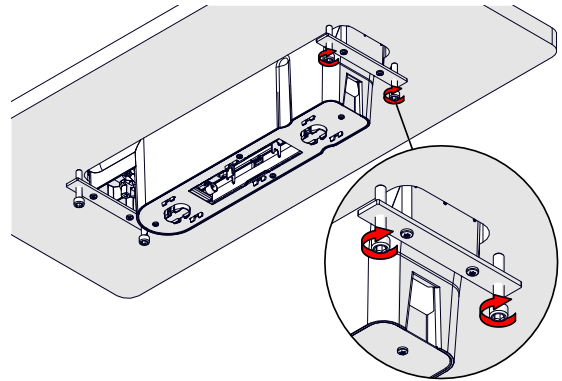


CAUTION Do not overtighten

5 Align QIKPAC CARRY with QIKDOC, slide the heel side of the QIKPAC CARRY into QIKDOC first and rotate down until click is heard

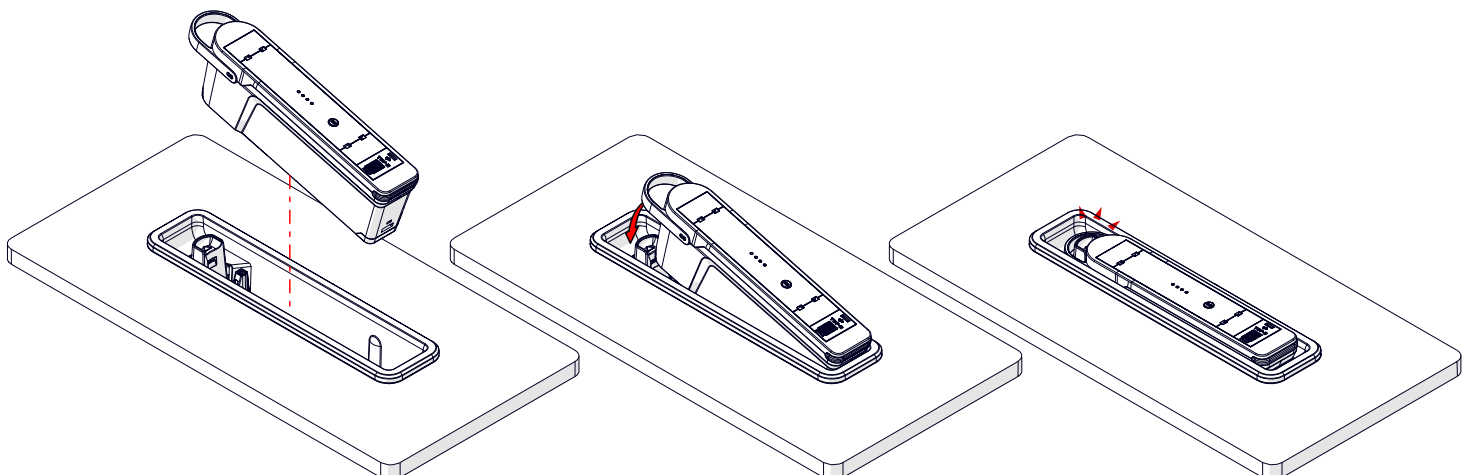


Removing QIKPAC CARRY from QIKDOC


- 6 Pull thumb release (highlighted orange) to release QIKPAC CARRY

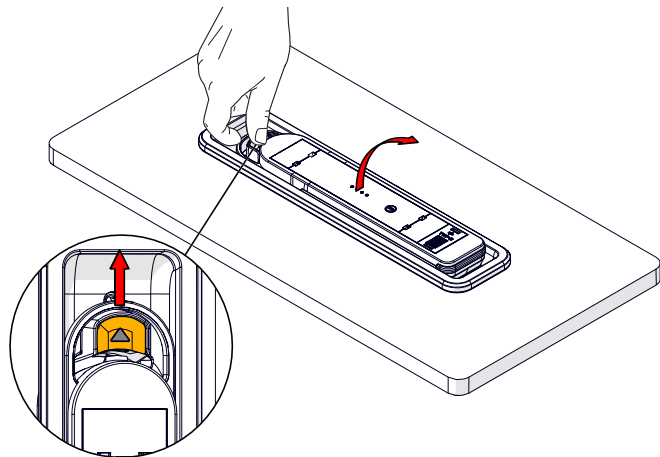




- 7 Lift QIKPAC CARRY from QIKDOC

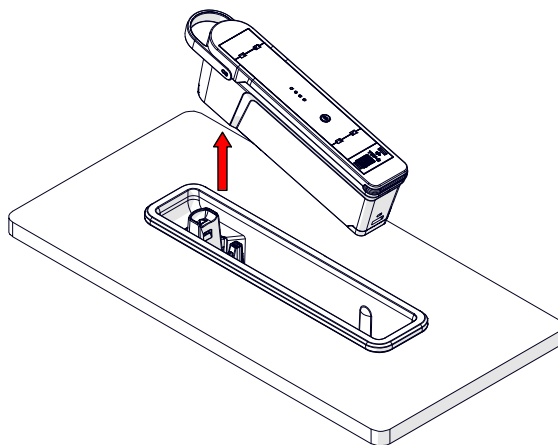

- 8 Connect GST08 cable(s) to underside of QIKDOC (where applicable*)

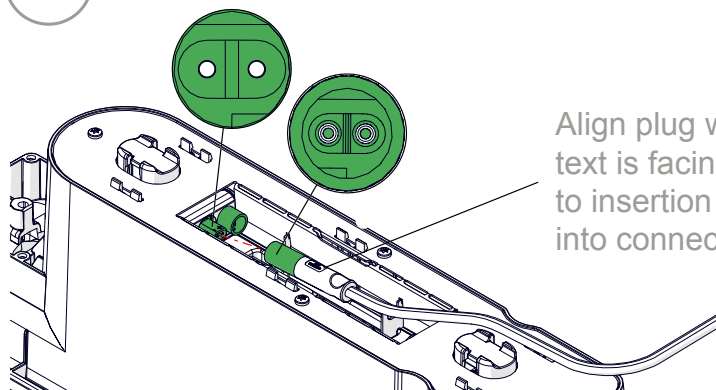


Rear View

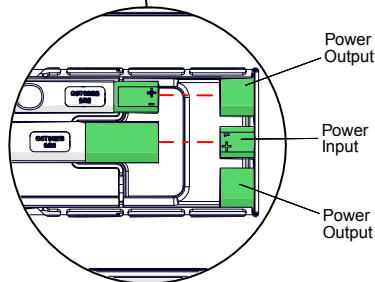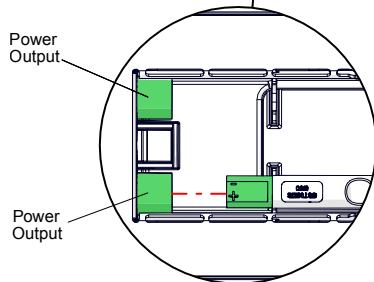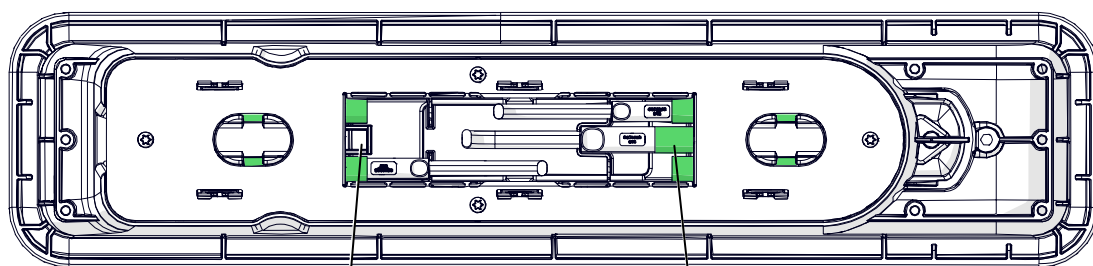


*SIT STAND MECHANISM CAN BE CONNECTED TO EITHER END OF THE QIKDOC, BUT THE SECOND OUTPUT AT THE SAME END OF THE QIKDOC SHOULD NOT THEN BE USED (OTHERWISE BATTERY OVERLOAD AND SHUTDOWN MAY OCCUR)

9 Cable tie GST08 cable(s) into place

Slide cable tie through slot

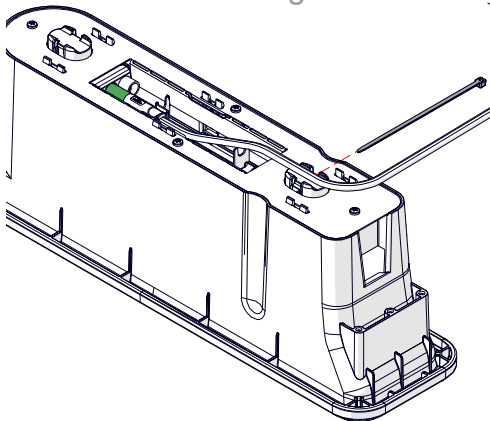

Fold cable tie over cable

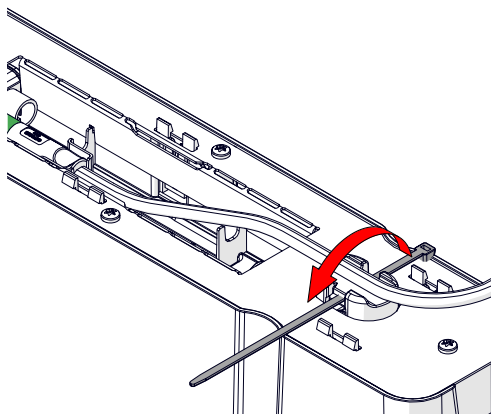

Tighten cable tie & remove excess

